



Fuze

PDV75C

PORTABLE DVD PLAYER

USER MANUAL

FOREWORD


THANKS

Dear Customer,

We would like to take this opportunity to thank you for purchasing this DVD player. We strongly recommend that you carefully study the User Manual before attempting to operate the unit and that you note the listed precautions.

1. Ensure that there is a minimum distance of 5 cm around the apparatus for sufficient ventilation.
2. The ventilation openings should not be obstructed by any type of covering. For example, newspaper, table-cloths, curtains, etc.
3. No source with an naked flame, such as a lighted candle should be placed on or near the device.
4. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on or near the device.
5. The batteries should not be exposed to excessive heat such as sunshine, fire or similar heat sources.
6. This unit is controlled by a micro-computer, therefore a display error may occur when there is a thunder storm, static interruption or other interference. In this case, please turn off the power for 10 seconds and the unit will reset to normal once it is switched on.

ACCESSORIES

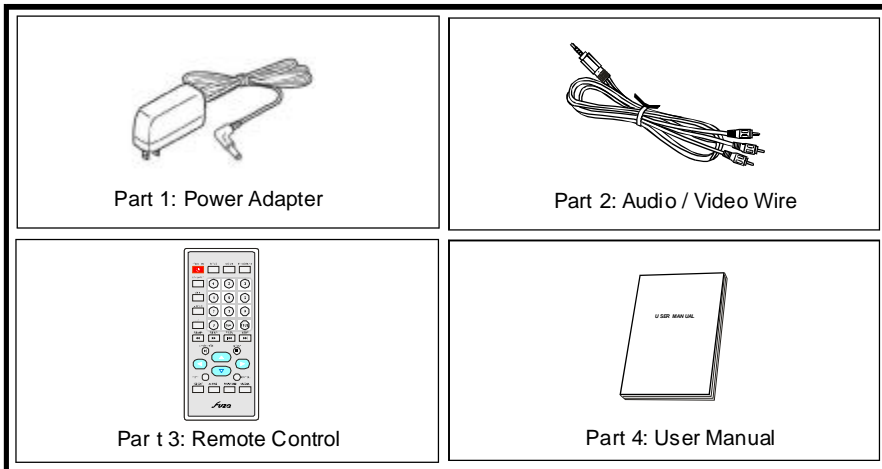

TROUBLE SHOOTING

For your convenience, we have listed some methods to solve common problems you may encounter when you using the system. If the problem occurs repeatedly, contact the nearest maintenance center.


Problem	Possible cause	Solution
Power supply does not work	Power plug is not fully inserted into the power socket	Fully inset the power plug into the power socket
Remote control does not work	The batteries have been used up	Replace them with new ones
	The remote controller is not aimed at the remote control sensor	Please aim the remote control correctly; in line with the remote sensor
No image on the TV screen	The system is not connected correctly	Reconnect the system by referring to the illustration
	TV not set in video mode	Set the TV in video mode
	The scanning mode does not match to the TV scanning mode	Reset the scanning mode
Play is unavailable	No disc inserted	Insert a disc
	Disc incorrectly inserted	Reinsert the disc with the picture upward
	Disc is not compatible with this device	Only use disc that are compatible with this device
No sound from speakers	Audio wire is not connected correctly	Connect the audio wire correctly
	Incorrectly connected to amplifier	Connect the amplifier correctly by referring to the illustration
Discontinuous sound or distorted pictures	Disc is not clean	Replace with a clean disc or use a soft cloth to clean the disc
	Disc scratched	Replace with a new one
	Disc distorted	
Invalid display on the screen	Operation incorrect	Please refer to the user manual

CONTENT


FOREWORD	1
CONTENT	2
WARNING	2
PANELS	3
REMOTE CONTROL	4
CONNECTION WITH TV	5
CONNECTION WITH AMPLIFIER	6
SYSTEM CONNECTION	7
BASIC OPERATION	8-14
MENU SETUP	15-19
SPECIFICATION	20
TROUBLE SHOOTING	21

WARNING

Please read and understand all the warnings such as the following and those marked on the unit. This unit has been designed and manufactured to assure personal safety.

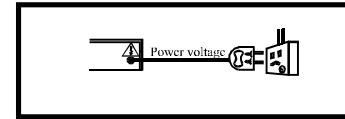


Connect only to appropriate main power as indicated on the unit or User Manual

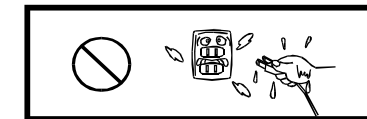


Keep unit and power plug away from water.



 
Avoid direct sunshine and heat source.

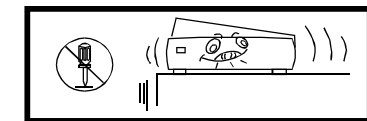

Never open the cover and avoid metals dropping into the unit, such as needle, hairpin, coin, etc.

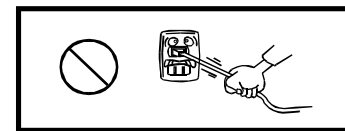


Protect the power cord: avoid high pressure and standing on it; do not pull& bend the cord excessively.

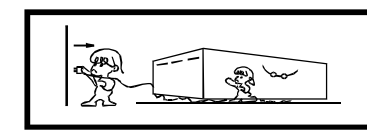


Unplug the set from the socket outlet when you do not use it for a long period of time.

PANELS

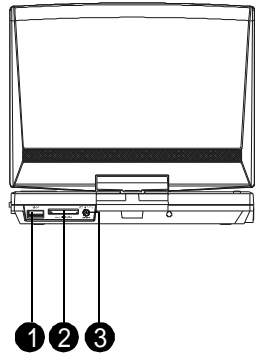

1. USB PORT
2. MULTI-MEDIA CARD PORT
3. POWER SUPPLY INPUT
4. VOLUME BUTTON
5. EARPHONE SOCKET
6. AUDIO/VIDEO OUTPUT
7. AUDIO/VIDEO INPUT
8. POWER ON/OFF

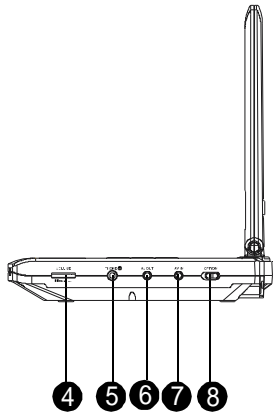

SPECIFICATION


Disc Type	DVD VCD1.0, 1.1, 2.0 SVCD MP3 MPEG 4* CD-RW DVCD
Video Format	MPEG 2 for DVD, MPEG 1 for VCD
Audio Format	MPEG 1, MPEG 2, PCM, STEREO
Signal Output	Video system: NTSC, PAL, AUTO Video output: 1.0 V p-p Audio: Stereo
Output/Input Joints	Audio / Video output, Audio/Video Input
Outer Facilities	USB, Multi-media card
Power Source	DC 9-12V
Battery Type	Lithium-ion polymer battery
Max. Power	10W
Audio S/N	80 dB Weight A
Operating Condition	Temperature: 0--45 °C

MENU SETUP

Password


Select this option to change the password. You must know the old password in order to change it. The original password is 138900.

6. Exit Setup Page

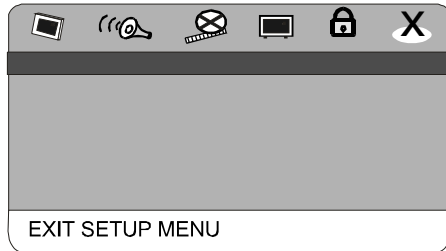


This option is used to exit the Setup menu; you can also press the SETUP button on the remote control to exit.

PANELS

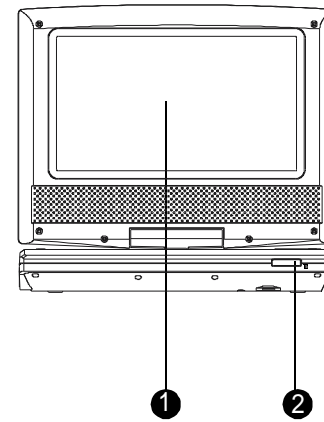

1. DISPLAY SCREEN
2. REMOTE CONTROL SENSOR
3. FUNCTION BUTTON
4. MENU BUTTON
5. AUDIO INPUT BUTTON
6. EJECT BUTTON

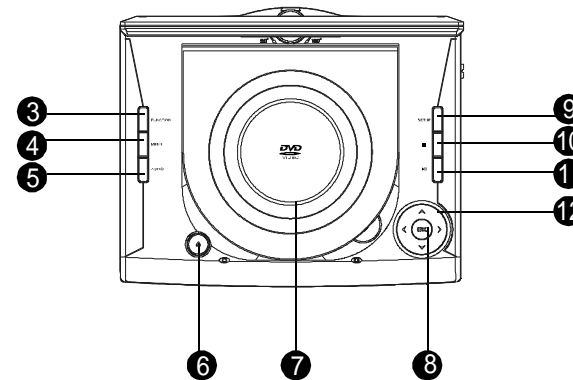


7. DISC DOOR
8. OK BUTTON
9. SETUP BUTTON
10. STOP BUTTON
11. PLAY/PAUSE
12. DIRECTION BUTTONS


REMOTE CONTROL

NOTE:

1. Align the remote control directly at the remote control sensor of the device.
2. The range of the remote control depends on the charge of the battery.
3. Bright light (sun or artificial light) should not fall directly at the remote control sensor. Bright light can negative influence the efficacy of the remote control.
4. Make sure that there are no obstacles between the remote control and the remote control sensor.

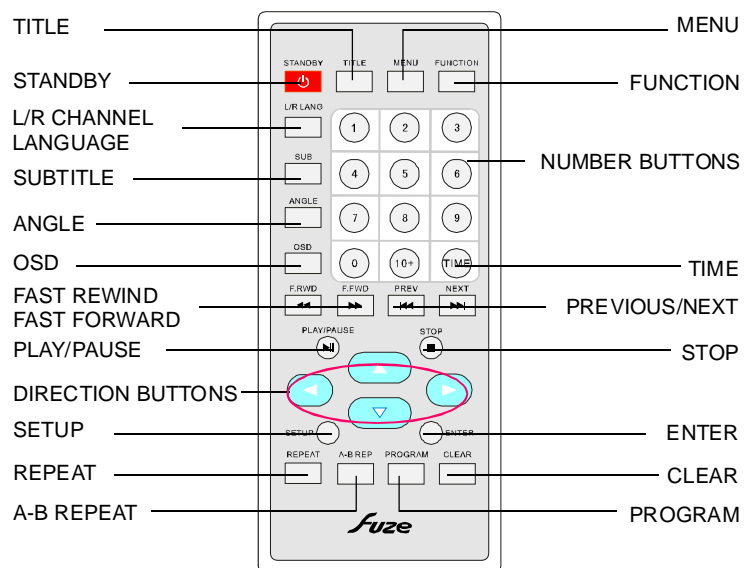

1. Reverse the remote control, and clasp the buttonhole, then pull the cover out at the same time.
2. Insert the battery of type CR 2025 into the battery compartment. Make sure the symbol + faces up.
3. Replace the battery cover.

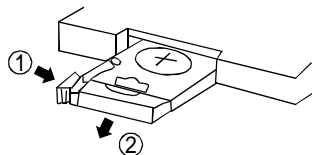

Note:

- 1) If the remote control only can work within short distance, please change a new battery.
- 2) Never try to recharge batteries, short-circuit, cutting or buried.
- 3) If you won't use the remote control for a long time, please remove the battery.

MENU SETUP

(This setup page only be available when the player in No Disc or Eject status.)

1. TV Type

Select the corresponding TV system to fit your system, PAL, AUTO, NTSC system are available of this device.

2.PBC

This option is used to open or close PBC.

3. Audio

Select the desired audio language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others).

Note: The DVD audio language must be recorded in the selected language, otherwise the default language will be on.

4. Subtitle

Press the Subtitle key repeatedly to select a subtitle language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others).

Note: The Subtitle language must be recorded in the selected language, otherwise the default language will be on.

5. Disc Menu

Select the desired menu language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others). If there is no such an option in the disk ,the default language of the disk will be played.


6.Parental

This unit has 8 different age ratings for selection. You can move the cursor to select one of them, then press "Enter" button on the remote control to enter. The player will remind the new password.

7. S/W Version: This option is used to displayed the model of this unit and its factory name.

8. Default: Select this option to reset all the preferences to their original factory setting.

5.Password Setup Page

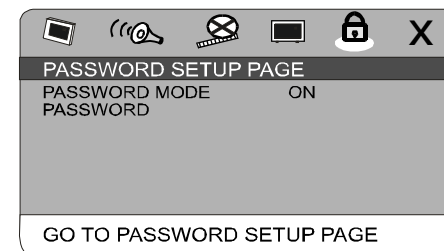

MENU SETUP

4. 3D Processing

Reverb Mode


This option has different reverb modes: Concert, Living Rom, Hall, Bathroom, Cave, Arena, Church.

5. HDCD

Filter

This option has three settings: OFF, 44.1KHz, 88.2KHz, please set it according to the disc so that getting more clear and more exquisite sound.

3. Video Setup Page

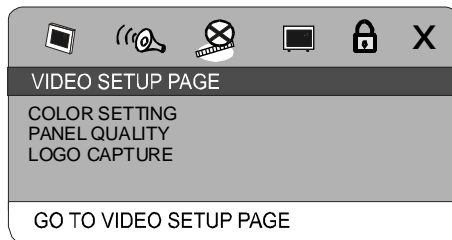

1. Color Setting

You can adjust the video output of sharpness, brightness, contrast, gamma, hue, saturation, luma delay according to your favour.

NOTE: The adjustable range of sharpness is: High, Medium and Low.

The adjustable range of brightness is: +/-20 (default is 0).

The adjustable range of contrast is: +/-16 (default is 0).

The adjustable range of hue and saturation are: +/-9 (default is 0).


The adjustable range of gamma is: High, Medium, Low and None.

The adjustable range of luma delay is: 0T, 1T.

2. Panel Quality: You can check the panel quality in this option.

3. Logo Capture: In the status of video playing, select this option can download the picture that you want.

4. Preference Setup Page

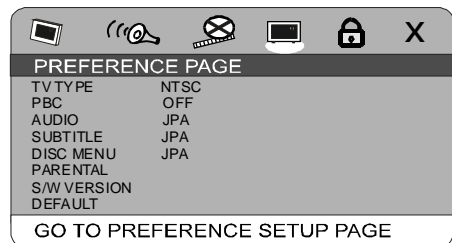

CHARGING

About The Battery

1. The power source of this unit is Lithium-ion (Li-ion) polymer battery, which is high energy density, miniaturization, ultra-thin, light-weighted and safe.
2. As the battery is not influenced by the memory effect, you can charge up this battery anytime without care whether the power is used up or not.

Battery Charging

1. Connect the power adapter with this unit (DCIN jack), and then plug another point of adapter with power outlet.
2. It takes about 3.5 hours for overcharged. Then you can use it constantly about 2.5 hours.

Note: 1) While charging, please turn off this unit.


2) The red light means ``Charging``; the green light means ``Overcharged``.

Battery Maintenance

1. Operating Temperature: 0°C - 45°C.
2. While the unit is playing, it will releases heat; and this is normal.
3. Please unplug the power source when the unit is not used.
4. It shall not be exposed to excessive heat/moist, such as sunshine, fire, water or the like.
5. Avoid crashing of violence.

SYSTEM CONNECTION


1. If your TV-set has AV terminal, connect this unit (AV OUT jack) to TV-set with AV cable, and set TV-set to be AV status. Then you can watch the video on TV-set screen. (Figure 1)
2. If your Audio/Video player has AV terminal, connect this unit (AV IN jack) to this player with AV cable, and then you can watch the video on this unit's screen. (Figure 2)

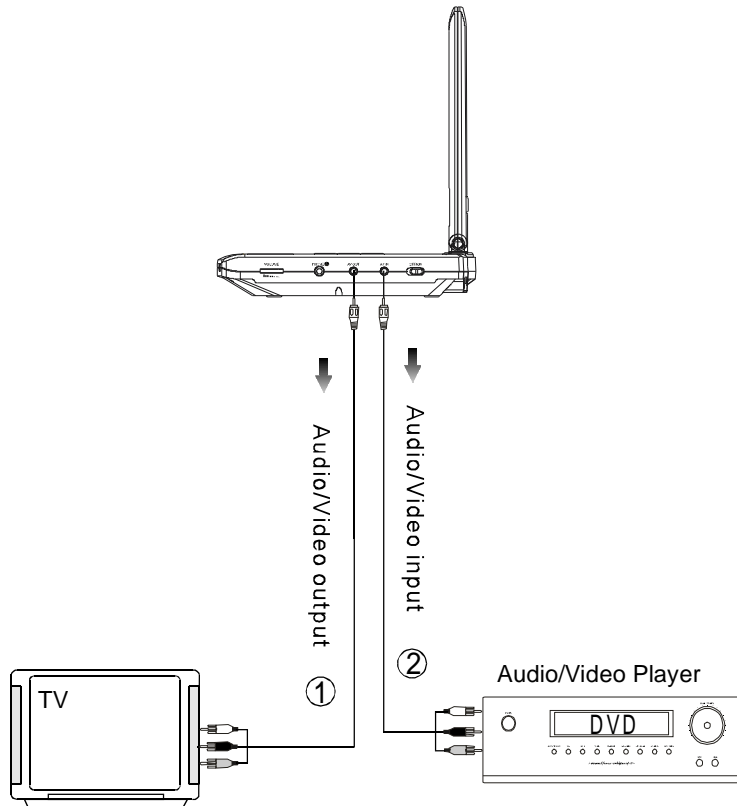

MENU SETUP

7. Logo Type
In this option, you can select the default or captured picture as the opening desktop of the unit.
8. DVD Show
In this option, you can set the DVD Show to be ON/OFF.

2. Audio Setup Page

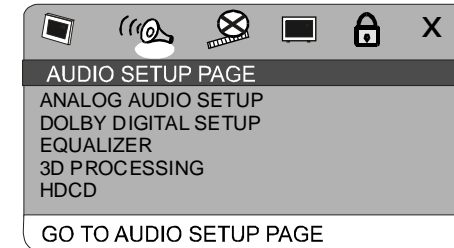


1. Analog Audio Setup
 - 1) Downmix
 - (1) LT/RT: audio output from Left and Right channel
 - (2) Stereo: stereo audio output
 - 2) Dialog
This option is use to make the dialogue more clear.
2. Dolby Digital Setup
 - 1) Dual Mono
This option is used to set the mode of audio output, including Stereo, L-Mono, R-Mono and Mix-Mono.
 - 2) Dynamic
This option is chosen when Line output is selected for the compressing mode. Linear compressing ratio is adjusted to acquire different compressing effects.
3. Equalizer
 - 1) Sound Mode
This option is used to select the different balanced effect, such as OFF, ROCK, POP, LIVE, DANCE, TECHNO, CLASSIC, SOFT.
 - 2) Bass Boost
It used to adjust the sound effect of Bass boost to be ON or OFF.
 - 3) Super Bass
ON: set the super bass on, and adjust the super bass effect.
OFF: set the super bass off.
 - 4) Treble Boost
ON: set the treble boost on and adjust the treble effect.
OFF: set the super treble boost off.

MENU SETUP

Press **Setup** button on the remote controller to open the menu setup function, the TV screen will display the following figures. Press **Left/Right** direction buttons to move the cursor to the different setup pages: Also press the direction buttons to move cursor to the item you want, then press **Play/Enter** button again to enter the subdirectory.

1. General Setup Page

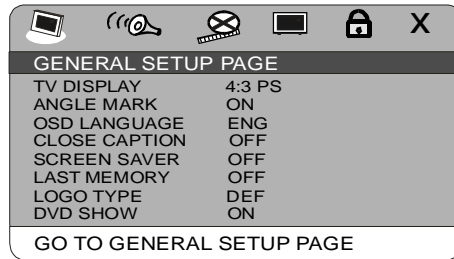

1. TV Display

(4:3PS, 4:3LB, 16:9)

- 1) No matter which format you select, if the screen is 4:3 display, the image is able to be displayed in 4:3.
- 2) The DVD screen format is changeable.
- 3) When the screen is displayed in 4:3, the display format of DVD is 16:9, the image will be compressed.

2. Angle Mark

If you select the angle mark, the multi-angle mark can be shown on the screen when the disc have the multi-angle pictures.

3. OSD Language

You can select English or Japanese for all the setup page.

4. Close Caption

When playing DVD discs, choose this OFF option to close caption, choose ON option to open the caption. The effectiveness is subject to the disc you are playing.

5. Screen Saver

This option is used to open/close screen saver program, options:

ON: in the status of stop or no disk, the screen saver program will be automatically turned on within the setting time.

There will be a video setting image, and the device will turn to power saving mode, thus protecting your electrical appliance and prolonging its lifespan. Press any button to cancel the screen saver.

OFF: the screen saver program will not be activated in any cases.

6. Last Memory

Select this OFF option to close memory function, choose ON option to open.

BASIC OPERATION

PREPARATIVE

- 1). Before turning on, check whether all the connection are correct and reliable. Plug the power plug into the corresponding power socket.
- 2). Open the front panel, and turn on the main power by pushing the **POWER ON/OFF** button which on the right side of this unit.
- 3). Press **EJECT** button (beside the disc door) to open the disc door; Put the disc into the disc compartment, and close the disc door; The unit starts reading and playing the disc automatically.

STATUS DISPLAY

In play status, press **OSD** button, the display screen will display the following data:
VCD/CD display: Single Elapsed, TR(Track Remain), Total Elapsed, DR(Directory Remain), Off.

DVD display: Title Elapsed, Title Remain, Chapter Elapsed, Chapter Remain, Off.

SOUNDTRACK SWITCH

While playing VCD/CD, press **L/R/LANG** button to select the multiple output modes, such as Mono L, Mono R, Stereo and Mix-mono. Press the button once to switch one soundtrack.

While playing DVD, Press **L/R/LANG** button can select multiple languages for playback. (Only applies to the discs like DVD recorded in multiple languages.)

FAST FORWARD & FAST REWIND

In play status, press **◀◀** button or **▶▶** button, there will be several speeds of fast rewind and fast forward, shown as follows,



PREVIOUS & NEXT

In play status, press **◀◀** button, the song will skip to the previous one for play, press **▶▶** button, the song will skip to the next one.

SUBTITLE SELECTION

When the played DVD disc records multiple subtitles, you can make selection of subtitle language by pressing **SUB** button, they are:
English, French, Spanish, Chinese, Japanese, Korean, Russian and Thai.

BASIC OPERATION

REPEAT

In play status, successively press **REPEAT** button to separately select the different contents for repetition.

- 1). As for DVD, successively press **REPEAT** button, the TV screen will separately display: CHAPTER, TITLE, ALL.
- 2). As for CD, VCD, CD-R, etc., Successively press this button, the screen will separately display: TRACK, ALL.
- 3). As for MP3, JPEG, etc., There are options: SINGLE, REPEAT ONE, REPEAT FOLDER, FOLDER, SHUFFLE, RANDOM.

A-B REPEAT

In play status, press **A-B REP** button to realize the specific section repeat, that is, press this button once at the beginning of the section (i.e A), and press it again at the end of the section (i.e B), this player will automatically return to A and starts to repeat playing the section from A to B. Press the button again to exit.

DIRECTION BUTTONS

Press the direction buttons **▲ ▼ ◀ ▶** (UP, Down, Left, Right) to move the cursor to select pictures or menu.

SETUP

Press **SETUP** button to enter the Setup Menu, and press this button again to exit the Setup Menu.

STANDBY

Press the **STANDBY** button on the remote control, the unit will go into the standby status. Press this button again to exit standby mode.

Note: 1) Before you perform the operation, make sure the main power is on.

- 2) This standby function is one kind of saving electricity modes. When the device do not be used for a long time, please turn off the main power.

TITLE

If the played DVD disc contains a directory column, press the **TITLE** button to take out the items contained in this disc. Use the direction buttons to move the cursor to select the items you want to play, or directly use the number button to select.

NUMBER BUTTONS

- 1). In playing songs, press **NUMBER** buttons to directly select the songs you need.
- 2). If the songs you want exceed 10 pieces, you may do it by pressing **10+** button once, and then press the number buttons (1--10). For example: If the 16th song is needed, you can press **10+** button first and then press **6** button.

BASIC OPERATION

3. Press **MENU** to display the File browser, select the file you want and press **ENTER** to start playing.


Note: The method of playback for files saved on a USB device or Media card is the same as for other discs. For more information, see **BASIC OPERATION**.

4. To exit the USB/CARD mode: Press **FUNCTION** button again, and move cursor to the other item you want, and then press **ENTER** button.

Note:

- 1) USB-Extension cable should have a max. Length of 0.5m.
- 2) Depending on the amount of data and media speed, it may take longer for system to read the contents of media device. In some cases, reading time may be as long as 60 seconds. This is not a malfunction.
- 3) Even when they are in a supported format, some files may not play or display depending on the content.
- 4) In ``NO DISC`` status, if there is one media device (USB or CARD) connected to the unit, the unit will play this media device automatically.

BASIC OPERATION

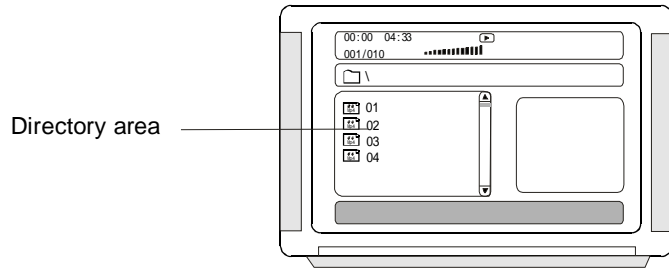


- 2). Press the direction button $\blacktriangle \blacktriangledown$ to move the cursor to the corresponding directory, press **ENTER** button to enter the next layer, and so on, until the desired picture is found for play.
- During playing, number buttons or $\blacktriangleleft \blacktriangleright$ button can be used to select pictures.
 - JPEG pictures may distort at the edge to some TV sets, this is not the unit's fault.
 - This unit can play the digital photo discs with extension name .JPEG, and also support the pictures that made by Adobe Photoshop.
 - If you want to repeat playing some pictures, pressing the **REPEAT** button is OK.
 - During browsing , press **STOP** button can go back to main menu.
 - After go into the subdirectory in playing MPEG4 disc, also you can do the operation such as fast backward, fast forward, pause etc.

USB/CARD

It is possible to listen to the Audio and watch Video/JPG files using the USB or CARD interface on the back of the unit.

 1. Connect the USB device or CARD with this unit:
2. Press the **FUNCTION** button on the remote control; press the direction buttons to move the cursor to the ``MEDIA`` item, and press **ENTER** button to confirm.

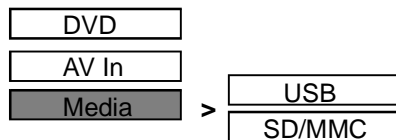

BASIC OPERATION

MENU

Pressing **MENU** button on the remote controller can open or close PBC status.
Note: 1). It will go into the root menu when play DVD discs.
2). The discs of 1.1 version or some fake discs don't support this function.

ANGLE SELECTION

In play status, successively press **ANGLE** button, you can enjoy the same action shot in different angles. (The function depends on the discs.)

STOP

In play status, press the **STOP** button, the display screen will return to the turn-on picture, press **PLAY** or **ENTER** button, the player will begin to play at the stopping time.
In play status, successively press **STOP** button twice and then press **PLAY** or **ENTER** button, the disc will be played from the beginning.

PLAY/PAUSE


In play status, press **PLAY/PAUSE** button, the player will pause, and press it again or press **ENTER** button to go on playing.

ENTER

In play status, press the **ENTER** button to confirm the option you selected.

FUNCTION

In play status, press the **FUNCTION** button on remote control can switch the following different modes: DVD, Audio input and Media.


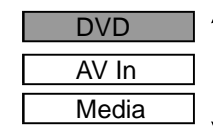


Note:
Press the $\blacktriangle \blacktriangledown$ button to move the cursor to the option you want, then press **ENTER** button to confirm.

BASIC OPERATION

PROGRAM

- While playing VCD/CD, press **PROGRAM** button, the display screen shows:
- While playing DVD, press **PROGRAM** button, the display screen shows:

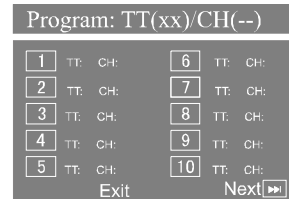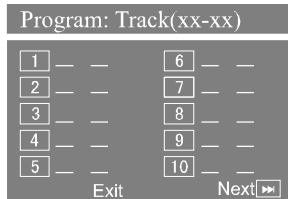

- 1) If the player is in the PBC ON status, while playing the programmed songs this operation will result in PBC turning off.
- 2) Input the number that you want at the place of the cursor; move the cursor to ``Start`` or press the **PLAY** or **ENTER** button, the songs will be played in the specified order,
- 3) While in programming mode, press **CLEAR** button to eliminate the digitals that you have input.
- 4) To exit programmed play: press **PROGRAM** button again, and the cursor move to ``Stop`` automatically; press **PLAY** or **ENTER** button, the cursor move to ``Exit`` automatically; press **PLAY** or **ENTER** button again to cancel programmed playing.


TIME SELECTION

In play status, press **TIME** button on the remote control, the display screen shows,

VCD disc display:



DVD disc display:

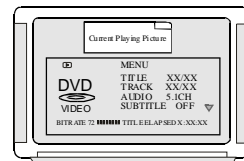

You can press the direction key to move the cursor to the setting option according to the above-mentioned screen suggestions, then press **ENTER** to confirm and use number keys to input the corresponding time numbers, after it is done, DVD player will start to play according to the setting time. When press the Down direction button, you can see the next item in the above screen.

There are 5 items in VCD screen: Track, Disc time, Track time, Repeat, Time DISP (Display); 9 items in DVD screen: Title, Track, Audio, Subtitle, Angle, TT (Total) time, CH (Chapter) time, Repeat, Time DISP (Display).


Note: The optional time range depends on the volume of discs.

BASIC OPERATION

While playing CD, MP3 or Mp4, press **TIME** button to switch between the ``Time Selection (current song/chapter)`` and ``Song/Chapter Selection``; then input the digital you want. The system begins playing from the specified time/song/chapter.

MP3 DISC PLAYING FUNCTION

- 1). Press the **EJECT** button (beside the disc door) to open the disc door, put an MP3 disc into the disc compartment, then close the disc door. This unit begins to read the disc, and the display screen will display the following figure:

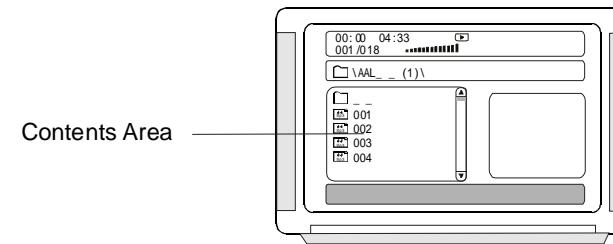

- 2). Press the direction keys **▲ ▼** to move the cursor to a certain directory, and press **ENTER** button to enter the directory. Press the direction buttons to enter the subdirectory or the file area, select a song with the cursor, press **PLAY** button to play the song.
 - During playing, press **◀▶** or **▶▶** button to select other songs under the current directory.
 - During playing, press the left direction button, the icon will skip to the directory symbol **□**, press the up/down direction button to select other directories, press **ENTER** button for confirmation.

Note: When play MP3 discs, this unit also has the functions such as mute, pause, previous and next selection. The operations are identical with CD playing.

MPEG4/JPEG PICTURE DISC PLAYING FUNCTION

- 1). Place the MPEG4/JPEG disc into the disc compartment, this unit will begin to read, the main directory will be displayed on the display screen.